



Jairol Soc. de Ferragens, Lda Rua do Metalúrgico, 1290 3750-325 Águeda Portugal


+351 234 600 790 info@jairol.com www.jairol.com




J111x29 INSTALLATION INSTRUCTIONS

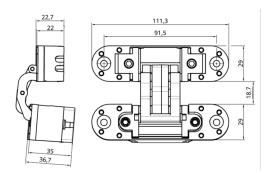

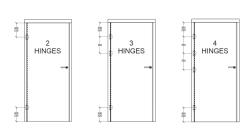

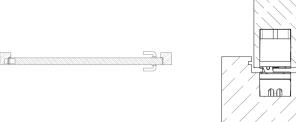

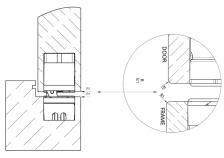



HINGE DIMENSIONS


HINGES ARRANGEMENT


HINGES POSITION

 RADIUS R1

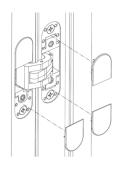

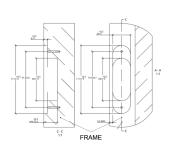




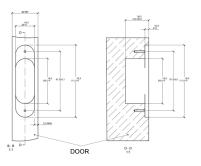

COVERS

MILLING DIMENSIONS

Heigh adjustment :

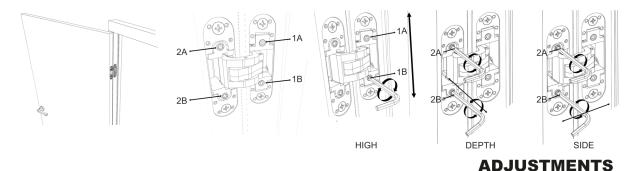

Side and depth adjustment. -For these both adjustments, it's made simultaneously with same eccentric screws 2A and 2B -Turn simultaneously the screws 2A and 2B on each hinge and screwed it evenly

-Make sure that the screw 1A is flush with the front surface of the hinge -Turn the screw 1B by half a turn on each hinge,then again to reach the good position

- -The maximum adjustment for the Depth is \pm 1 mm, and \pm 2 mm for the side

At the end you will notice a resistance on each screw

For the adjustment you will need a 4 mn Allen key

-The maximum adjustment of this hinge is ±2mm

When the adjustment is complete, put the covers back in place