


Jairol Soc. de Ferragens, Lda Rua do Metalúrgico, 1290 3750-325 Águeda Portugal


+351 234 600 790 info@jairol.com www.jairol.com





## **J95x23 INSTALLATION INSTRUCTIONS**

HINGES

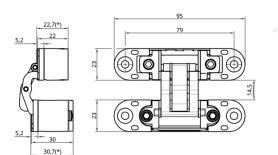

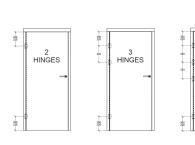

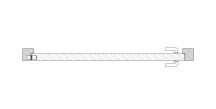

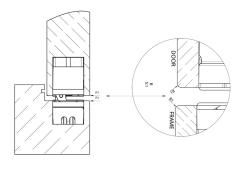


**HINGE DIMENSIONS** 


**HINGES ARRANGEMENT** 


**HINGES POSITION** 


**RADIUS R1** 

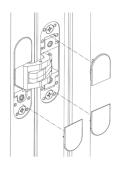

23,5 min 23,3

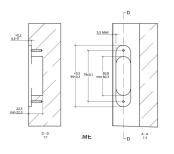


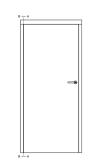

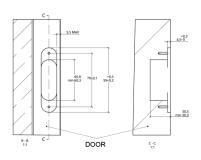

**COVERS** 

**MILLING DIMENSIONS** 

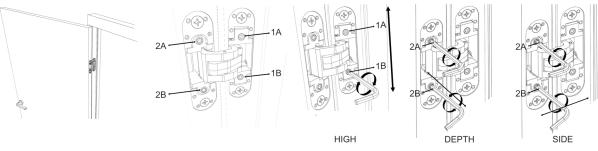

**ADJUSTMENTS** 

For the adjustment you will need a 4 mn Allen key

## Heigh adjustment :

- -Make sure that the screw 1A is flush with the front surface of the hinge
  -Turn the screw 1B by half a turn on each hinge, then again to reach the good position
- -The maximum adjustment of this hinge is ±2mm

## Side and depth adjustment.

- -For these both adjustments, it's made simultaneously with same eccentric screws 2A and 2B -Turn simultaneously the screws 2A and 2B on each hinge and screwed it evenly
- -The maximum adjustment for the Depth is  $\pm$  1 mm, and  $\pm$ 2 mm for the side

At the end you will notice a resistance on each screw

When the adjustment is complete, put the covers back in place